

16176-74 Vent plug / 07524-78 Vent button

A.




When the vent plug is locked into the waste tank, the two arrows (one on the waste tank and one on the vent plug) has to be pointed to each other.



B.


Turn the vent plug away from the arrow on the waste tank (can only be turned one way) and lift it up.
Note : some force may be needed to take the vent plug out.

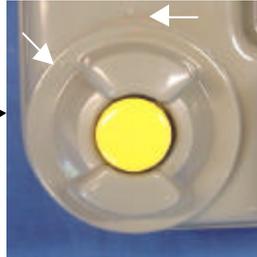

*Vent plug can now be replaced. If the vent button has to be replaced, please follow underneath instructions.

C.

Press the vent button in and pull the seal retainer loose.

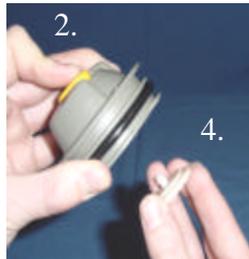

- 1. Vent plug
- 2. Vent button
- 3. Spring
- 4. Seal retainer



D.

Place new spring and vent button in the vent plug and push the new seal retainer in.
Note : Press the vent button in while assembling the new seal retainer.



E.

Place vent plug back into the waste tank and turn the two arrows back to each other

