

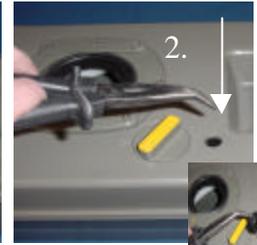
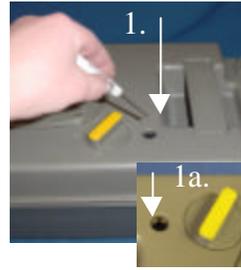


20339 Ventseal

A. Open the blade, and depress the ventseal (1) around outer edge of seal (1a). Take the ventseal out (2).

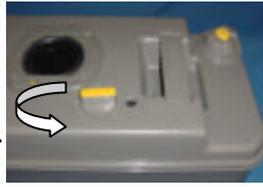


B. Bring new ventseal on its place as shown. Thinner flange has to be on the float which is inside the waste tank.

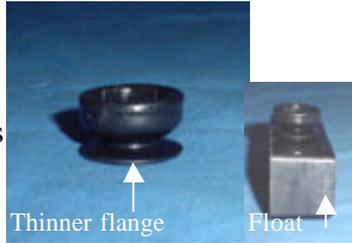

Depress the ventseal through the hole, from the outside. **Note:** Make sure that the ventseal is lying in the middle of the hole, when looking from the top.



C. Go with your hand in the waste tank and press against the float (ventseal will be pressed into its place).

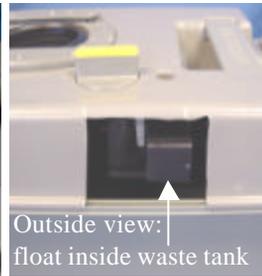

16175 Lipseal (Toilets produced until 15 June 2000)

A. Unscrew the 8 screws on the seal cover and, take the seal cover off.



B. Ensure the two cut outs () on the seal face upwards and line up with the two centre screws of the three positioned on either side of the seal cover.

