
1. 21000 fillet tube / 20292-02 Flush tube / 21003 Denow

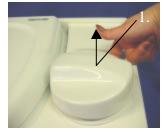

Lift the flush cap (1) up with your finger.





B. Push cylinder (2) down and turn it to the left to take it out. After this, the bellow cap (3) and housing (4) can be taken out.









Inside view,
C. nozzle (5) has
to be taken out.
Can be pulled
down.





Inlet tube (6), Flush tube (7) or Bellow (8) can now be replaced



**Note:** Inlet tube and Flush tube can easily be replaced by pulling of the part and press the new part on. For replacing the Bellow see following instructions.

Bellow is fitted into the housing with PTI (kind of kit). Depress bellow firmly loose (1) and pull it out (2).





When placing the new bellow, hold the parts in position as on the photo. Lug on the housing has to be on the right side.



Press the bellow into the housing and, assemble inlet tube and flush tube.







Bring nozzle back

D. into the hole and press it up (you will hear a click).Note:


Rib on nozzle has to go through the hole, to the inside of the toilet bowl.








Turn the lug (1) on the housing, against the lug (2) on the actual Cassette toilet.

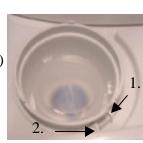

E.

 Cylinder can only be pressed in one way (single rib has to face the backside of the toilet).











## 2. 20291-62 Flush mechanism





Lift the flush cap (1) up with your finger.






Flush mechanism
B. can be pulled out by hand.







C. Inside view, nozzle (2) has to be taken out. Can be pulled down.

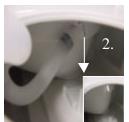




Bring nozzle from new
D. flush mechanism back
into the hole and press
it up (you will hear
a click). **Note:** Rib on
nozzle has to go through
the hole, to the inside of
the toilet bowl.





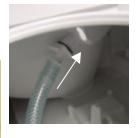

E.



Turn the lug (1) on the housing, against the lug (2) on the actual Cassette toilet.

