


# 16379-74 Mechanism Cassette C2/C3


## Materials needed



Pull the waste tank out of the Cassette toilet by lifting up the yellow clip.

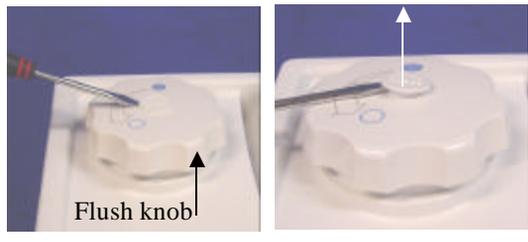

Place flat screwdriver under the small plastic insert, which is in the middle of the flush knob, and take it off.

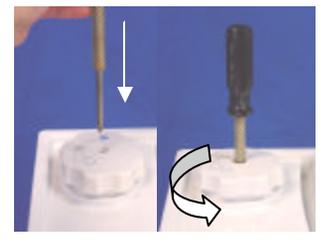


Unscrew the one screw inside the flush knob, with the crosshead screwdriver




Complete flush knob can now be taken out.

After the flush knob, the mechanisme housing has to be taken out. **Note : This can only be done from the outside.**

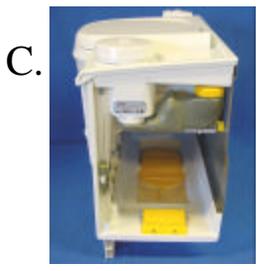


Mechanisme housing which is located inside the Cassette toilet with four screws (on each corner).

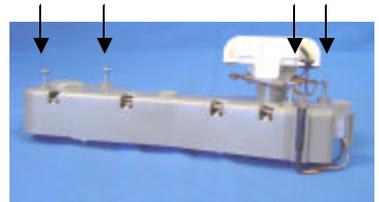

When looking inside the Cassette toilet from the outside, the mechanisme is screwed to the underside of the water tank.

D.

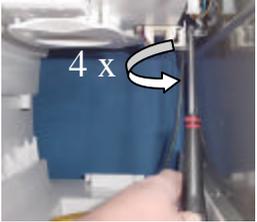


Remove the four screws located on the mechanism, allowing it to drop down.  
**Note :** On Cassette toilets which are produced between 1987 and 1989, 5 screws should be removed.




Pull the white connector loose from the mechanism, and press the connector into the new mechanism.

E.

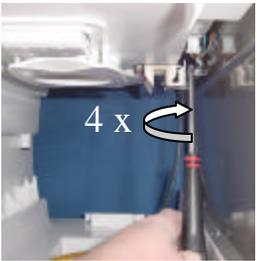

Screw the mechanism back on its place.

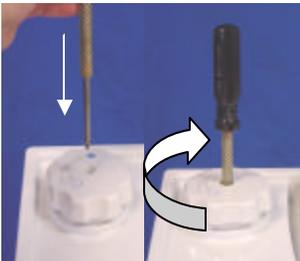

Place flush knob back (in the same position as on the photo, see print on the knob) and, screw it back into the toilet with the crosshead screwdriver.

Leaflet no. 20268/032002