


23847 SC234/C200 Blade mechanism

- A. Remove sliding cover and 2 screw covers.
Note: Lever off gently screw covers located on either side of the seal cover.




- B. Unscrew the 8 screws on the seal cover and, take the seal cover off.

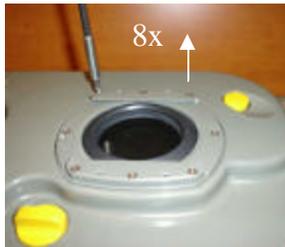

General mechanism info:

the blade is pressed into the blade arm on the inside. Do **NOT** remove the blade arm when changing the blade.

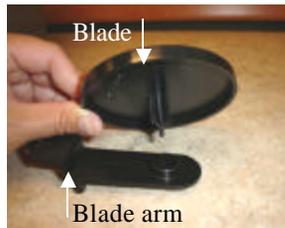

- C. Pull the blade gently out of the blade arm.
Note: the blade is pressed into the blade arm.



- D. Push the blade arm a little bit up and press the new blade gently in the hole of the blade arm. Open and close the blade a few times, to ensure a good operation of the mechanism.



E. Place the lipseal on the waste tank.
Note: Thinner flange has to face downwards towards the blade.



F. Screw seal cover back onto the waste tank and press both screw covers back on the seal cover.



G. Place sliding cover back on its place. Make sure that the two arrows are pointed to each other.

